

天鸿系列飞控适配 PXN 莱仕达飞行摇杆说明


1.将飞行摇杆连接至电脑 USB 口；



2.打开“华羽通盛”地面站软件；

3.联通飞机；

4.选择“手柄及视频”

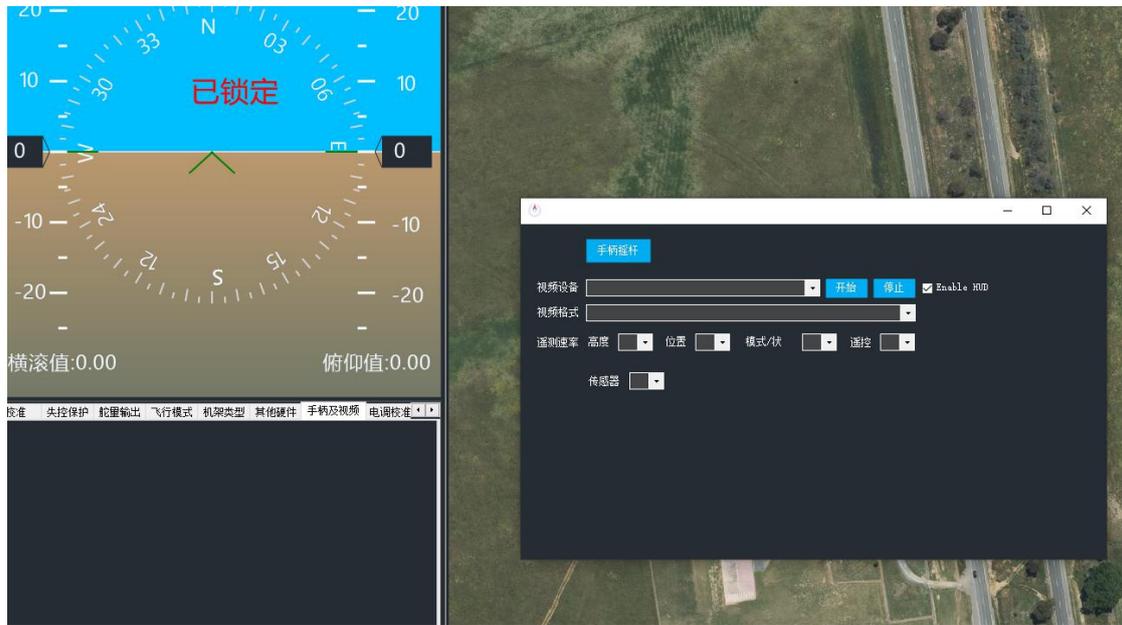

4.点击“手柄遥杆”



5.设置控制器轴；

X-对应副翼控制

Y-对应升降控制

Z-对应油门控制

Rz-对应航向控制

6.设置按钮功能:

But 1	0	Detect		Arm	Settings
But 2	1	Detect		ChangeMode	Settings
But 3	2	Detect		ChangeMode	Settings
But 4	3	Detect		ChangeMode	Settings
But 5	4	Detect		ChangeMode	Settings
But 6	5	Detect		ChangeMode	Settings
But 7	-1	Detect		ChangeMode	Settings
But 8	-1	Detect		ChangeMode	Settings
But 9	-1	Detect		ChangeMode	Settings
But 10	-1	Detect		ChangeMode	Settings
But 11	-1	Detect		ChangeMode	Settings
But 12	-1	Detect		ChangeMode	Settings
But 13	-1	Detect		ChangeMode	Settings
But 14	-1	Detect		ChangeMode	Settings
But 15	-1	Detect		ChangeMode	Settings
But 16	-1	Detect		ChangeMode	Settings

遥控器按钮“2”对应“But1，功能设置为 Arm 即解锁”

遥控器按钮“3”对应“But2，功能设置为 ChangeMode 即模式选择，可选择定点，手动，自动等”

遥控器按钮“4”对应“But3”，功能设置为 ChangeMode 即模式选择，可选择定点，手动，自动等”。以此类推，遥控器按钮号码数映射到控制设置页后，编号应减少 1。

7.设置好后操作手柄进行通道响应检查;

8.检查无误后可以试飞。